TigerStop®

fast and accurate...every time

How To Check the Minimum and Maximum Limit Settings

TigerStop Line
(TigerStop, TigerCrossCut, TigerFence, TigerRack, TigerTurbo, HeavyDuty 2)

Version 5.xx

The best way to ensure the minimum and maximum limit settings are correct is to run the automatic "Find the End Limit" routine.

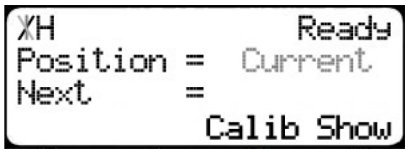

1. From the Ready Screen, press the [Show] soft key to show the menu options.

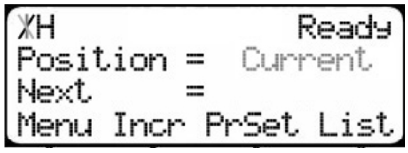

2. Press the [Menu] soft key to display the Menu Select screen.

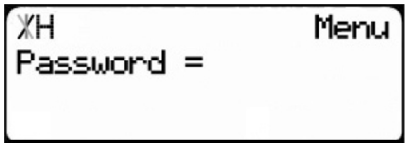

3. TigerStop requires a password to access all menu options. Enter your TigerStop password and press [=].

Note: By default, the TigerStop password is set to the serial number.

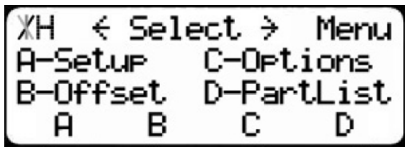

4. At the Menu Select screen, press the [Setup] soft key to access the Setup Menu.

5. Press until you get to the "Find End Limit" setting.

6. Press Start to run the routine.

7. When TigerStop stops moving, press Stop to return to the Ready Screen.